

PETKIT™


CLEAN EASY.  
DRINK FRESH.

PETKIT EVERSWEET MAX 2 (CORDLESS)

DISHWASHER  
SAFE



\*The image is for creative purposes only.

Heat-resistant material   
unlocks two new cleaning options.



CLEAN IN A DISHWASHER



CLEAN WITH BOILING WATER



\*To ensure your pet's drinking water is healthy, it is recommended to clean the water tank at least once a week and perform a deep cleaning once a month.

# CLEAN IN A DISHWASHER

(Hands-free)

(Hassle-free)

Place the water tray, lid, filter holder, water tank, and outlet pipe in the dishwasher for cleaning.



## Do's and Don'ts for Cleaning

### 「Do's」

- ✓ Follow the dishwasher's instructions strictly.
- ✓ Place the outlet pipe in the small cutlery basket for cleaning to prevent it from falling.

---


### 「Don'ts」

- ✗ Do not put the control module, base, wireless water pump, or filter into the dishwasher.
- ✗ If using the drying function, it is recommended that you do not select a mode that exceeds 212°F.

# CLEAN WITH BOILING WATER


(Boiling water cycle)  
(Double deep cleaning)

After regular cleaning, fill the water tank with boiling water and run it on power for 5-10 minutes to clean.

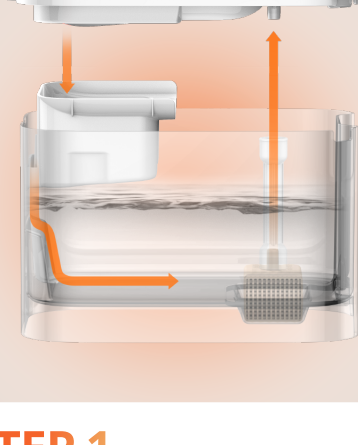

## STEP 1

Rinse the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

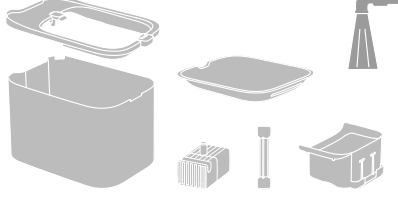

**Note:** Do not rinse the control module or the base; simply wipe them clean with a dry or slightly damp cloth.

## STEP 2

After cleaning all the components, reassemble the water fountain, fill the water tank with boiling water (176–212°F), and run it with power for 5–10 minutes for deep cleaning.

**Note:** Do not put in the filter and foam filter.



## STEP 3

After cleaning, pour out the boiling water, insert the foam filter into the pump, place a new filter in position, then fill it with clean drinking water. It is ready for normal use.



## 「Soak and Rinse with Boiling Water」



### ALTERNATIVELY, YOU CAN SOAK AND RINSE WITH BOILING WATER.

After regular cleaning, place the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump (remove the foam filter first) into boiling water for soaking or rinsing.

**(Note: Do not exceed 1 hour for soaking.)**

## Do's and Don'ts for Cleaning

### 「Do's」

- ✓ Only after completing regular cleaning should you proceed to clean with boiling water.
- ✓ Be careful to prevent scalding.

### 「Don'ts」

- ✗ Do not rinse or soak the control module or wireless base with water.
- ✗ Do not put in the foam filter or filter during boiling water cleaning.
- ✗ Do not allow pets or children to approach the unit during boiling water cleaning to prevent scalding.
- ✗ Do not soak in boiling water for more than 1 hour.

## CAUTION

1. Please follow the instruction manual to clean this product.
2. Do not rinse or soak the control module or base.
3. Do not put in the filter or foam filter during boiling water cleaning.
4. Do not rinse the filter or foam filter with hot water.
5. Please handle the water pump with care during daily cleaning and maintenance. If dropped accidentally, it could result in product damage.