


PETKIT™

USER MANUAL

PETKIT PUROBOT MAX 3
SELF-CLEANING CAT LITTER BOX

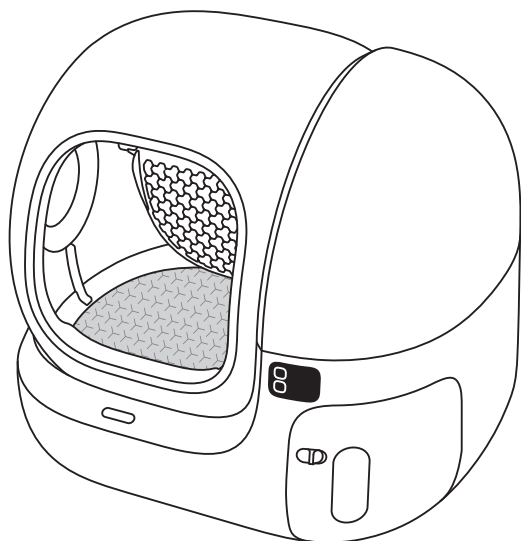


Please read this manual carefully before
use and keep it for future reference.

CONTENTS

- PACKAGE LIST 3**
- PRODUCT INTRODUCTION 4**
- INSTALLATION GUIDE 5**
- USAGE GUIDE 7**
- CLEANING AND MAINTENANCE 18**
- VIDEO GUIDE 26**
- BASIC SPECIFICATIONS 26**
- TO OUR VALUED USERS 27**
- SAFETY INSTRUCTIONS 27**

01 PACKAGE LIST


* Before installation, please check that all accessories listed below are included.

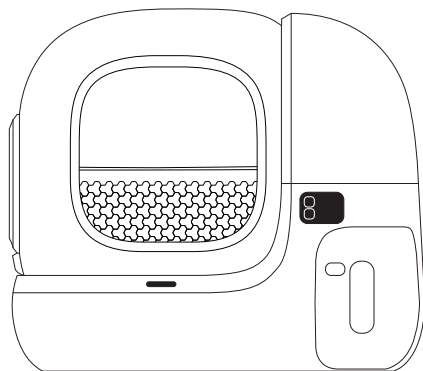

Litter Box


* **This manual applies to both the Basic version and the Premium version.**

- The Premium version includes a Breezy Smart Odor Eliminator.
- The Basic version does not include the Breezy Smart Odor Eliminator or the N60. These can be purchased separately if needed.

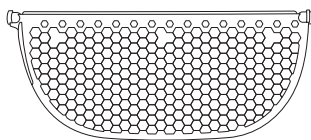


Honeycomb Fine Litter Sifter


* Installation and disassembly is the same as the standard litter sifter. See 5.2-**56** and 5.4-**645** for details.

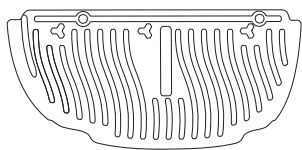

Magnetic Cat Litter Remover

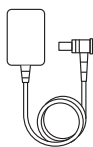

Power Adapter

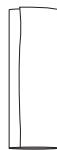

Trash Bag



Pet Odor Eliminator N50 2.0




User Manual



Pet Odor Eliminator N60

* Used in the Breezy Smart Odor Eliminator

02 PRODUCT INTRODUCTION

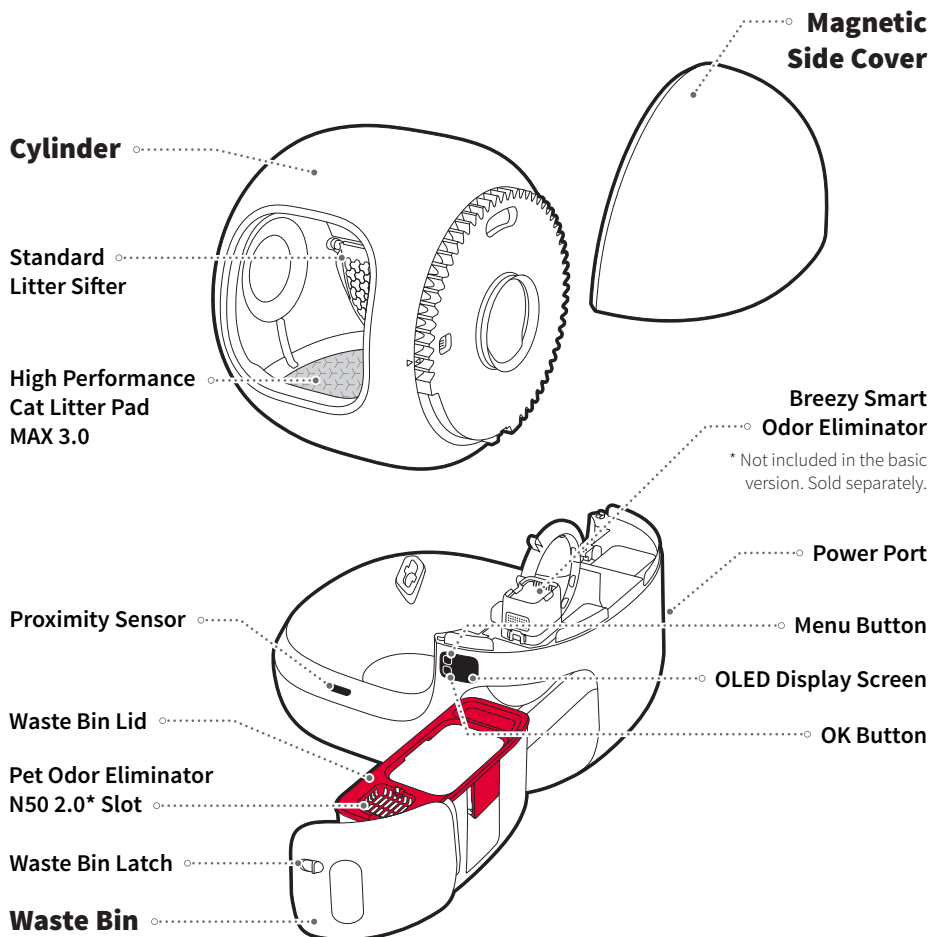

* Due to continuous product improvements, there may be slight differences in the actual product (including but not limited to appearance, structure, and color). The product images displayed on packaging and promotional materials are for reference only.


Component Names & Functions

Component	Function
Litter Sifter	Effectively filters clumps, no clogging, no missed clumps
High Performance Cat Litter Pad MAX 3.0*	Resistant to litter sticking, scratch-resistant, easy to clean
Pet Odor Eliminator N50 2.0*	Breaks down odors from cat waste in the waste bin, prevents odor from spreading
Breezy Smart Odor Eliminator*	Refreshes air inside the cylinder, gentle and non-irritating

* High Performance Cat Litter Pad MAX 3.0, Pet Odor Eliminator N50 2.0, and Breezy Smart Odor Eliminator are referred to below as litter pad, N50, and smart odor eliminator respectively.


03 INSTALLATION GUIDE

❶ Unlock the latch by sliding it to the right and pull out the waste bin. Remove the waste bin lid and take out accessories from inside.

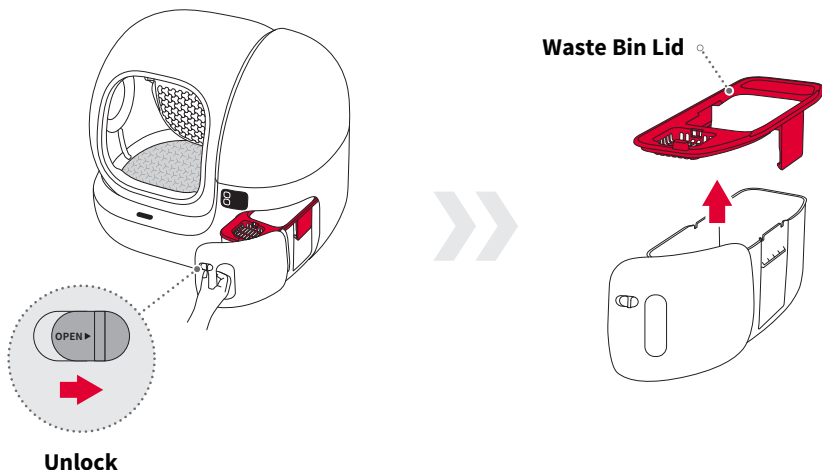


2 Place a trash bag into the waste bin, ensuring the bottom of the bag lies flat against the bottom of the bin. Install the waste bin lid.

NOTE: Make sure both sides of the waste bin lid clamp the bag securely (see illustration)

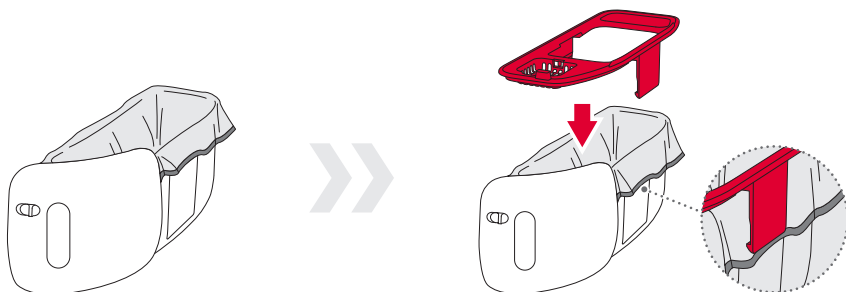


3 Remove the N50 from its packaging, place it into the designated position, and press firmly until secure.


4 Install the waste bin back into the litter box and lock the latch.

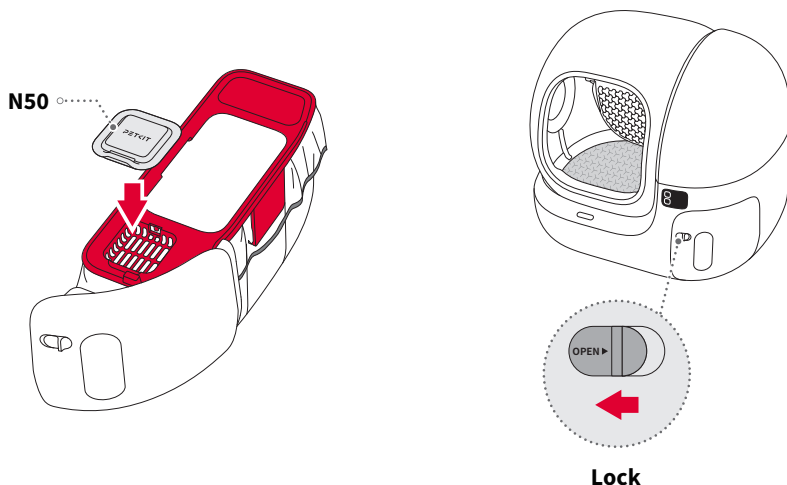


- 5 Remove the magnetic side cover. Place the N60 into the smart odor eliminator.

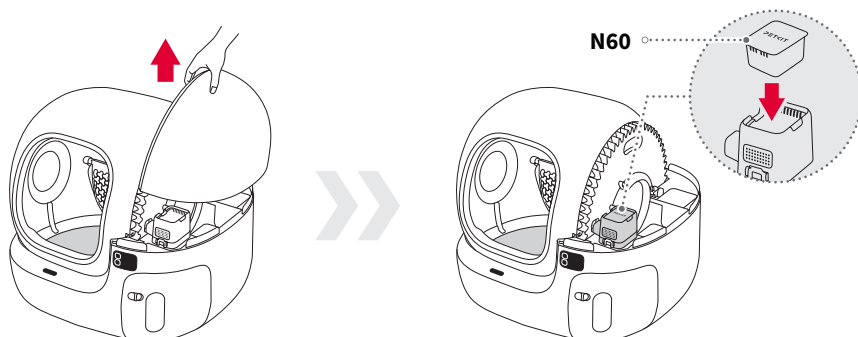

- 6 Reattach the magnetic side cover.

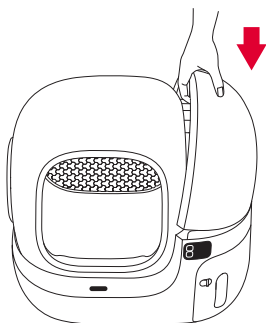

- 7 Insert the power adapter into the power port, then plug the other end into a power outlet.

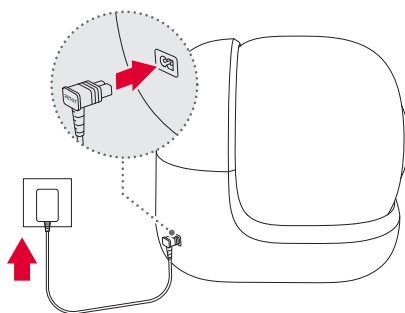

04 USAGE GUIDE


4.1 Adding Cat Litter

Do NOT use litter with granules longer than 12 mm or wider than 3 mm in diameter.

❶ Connect the power. After the device powers on, press  to switch to Maintenance Mode, then press  to execute. The cylinder will begin rotating.



❷ When the cylinder opening faces upward and stops, pour in cat litter. Press  to exit Maintenance Mode.

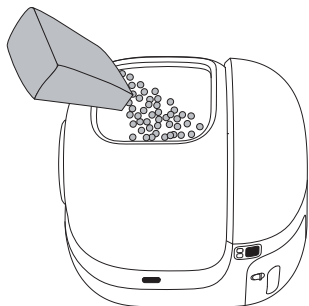

❸ Double-press . The device will automatically level the litter.



⚠ WARNING:

Do not fill litter above the MAX line inside the cylinder.

4.2 Control Panel

① Press  to switch functions, and press  to execute.


Menu Button

Press and hold: Power On / Power Off

Press: Switch functions (screen shows selected function)

OK Button

Press: Execute the selected function

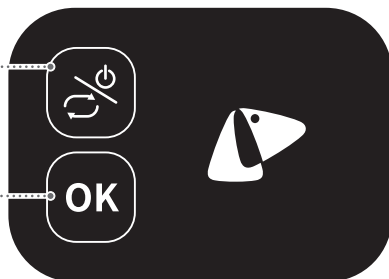

Functions



Maintenance Mode

Use when adding litter or cleaning the device



Reset

Return cylinder to home position



Clean

Start a cleaning cycle



Configure Network

Enters network pairing mode for App binding



Level Litter


Levels litter inside cylinder; use after adding litter



Deodorize

Activate smart odor eliminator for deodorizing

2 Display Status Icons

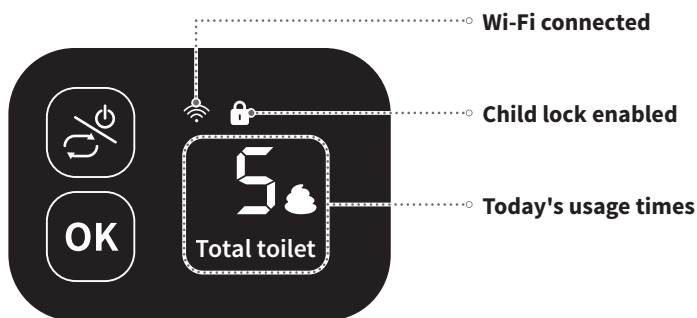

3 Display Message


When a status is active, a scrolling text message will appear at the bottom of the screen.

Display Message	Meaning
 The cat has approached the detection zone	Cat entered the litter box during a cycle. (Device will be paused and alert)
 Device failure	Check app for error details
 Waste collection bin is full, please empty	Empty the waste bin promptly
 Side cover not installed	Check that the magnetic side cover is correctly installed

* Additional status messages can be viewed on the device or in the electronic manual.

4.3 Device Binding


❶ Download and install the PETKIT App

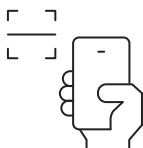

Download the PETKIT App from the App Store or Google Play.


❷ Add the device

Open the app, click “+” in the top right corner and choose “PETKIT PUROBOT MAX 3 SELF-CLEANING CAT LITTER BOX”.

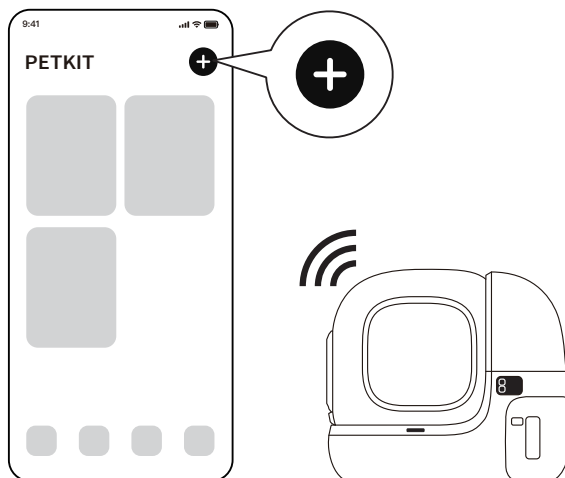

3 Start connection


Press the menu button on the device to switch to “Configure network”, then press the OK button to execute this function. The screen will display “Connecting...”, and the app will start connecting to the device. Please wait until the configuration is successful.

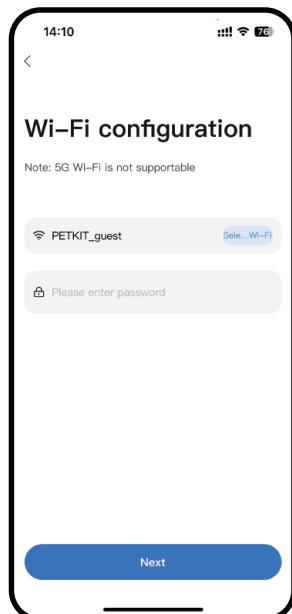

* Note: Interface may vary due to irregular software updates, please refer to the actual one.

4 Read instructions


To ensure your pet's safety and use this product properly, please read the instructions carefully after connecting to the app for the first time.

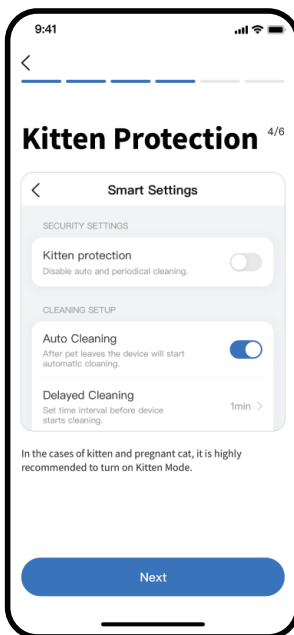

4.4 Smart App Control

1 Check device's status

Enter the device's home page and check its working status, pet toilet times, waste bin status, etc.

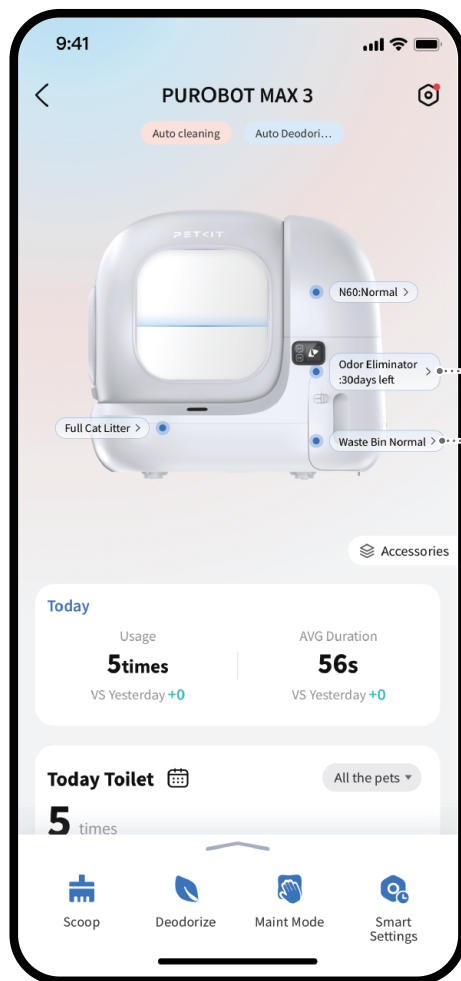

Reminder of the
odor eliminator's
service life

Reminder of
waste bin status

② Basic functional description



Scoop: Click it to clean the cat litter.



Maint Mode: Click it and the cylinder will rotate until its opening faces up, making it convenient to add cat litter or clean the device.



Empty Litter: After installing the magnetic cat litter remover, click it to empty the remaining cat litter in the cylinder.



Smart Settings: Set up cleaning mode and safety mode.




Deodorize: Click to deodorize the cylinder.

4.5 Smart Odor Eliminator

Tap “Deodorize” to deodorize the cylinder.


The deodorizing mode can be set in Settings. There are three options: Auto Deodorizing, Scheduled Deodorizing, and Deep Deodorizing.

* The Smart Odor Eliminator is not included in the Basic version. It needs to be purchased separately.

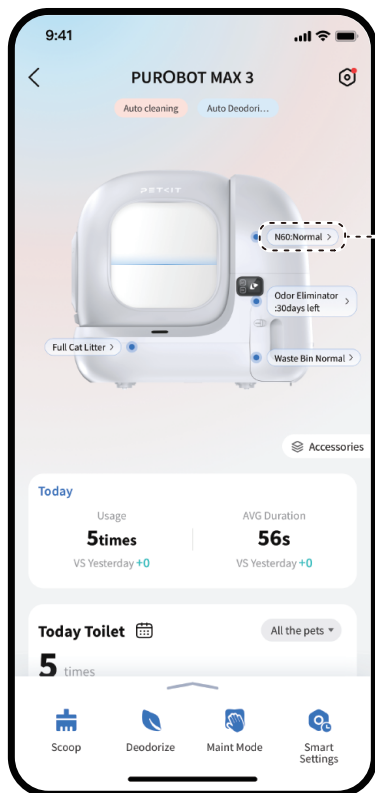

Odor Eliminator N60

When the N60 label turns red and displays "N60 Expired", please replace it in time. After replacing with a new N60, click Reset. When it shows "Normal", the installation is correct.

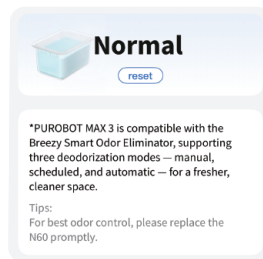

4.6 Other functions

① Kitten Protection

Turn on this mode if you have kittens or pregnant cats at home. When this mode is on, auto-cleaning and periodical cleaning will be disabled. You can click “Clean now” to clean the cat litter.

Kitten protection

Automatic or periodically cleaning will be disabled after kitten protection is enabled



② Continuous Rotation

When this function is turned on, the device will not stop working even if it detects a cat approaching, which can reduce the possibility of a cat entering and its secretions leaking into the bottom of the device.

*** When this function is turned off, the device will stop working if it detects a cat approaching. If the cylinder opening is facing downwards at the moment, there is a possibility of a cat entering and the leakage of toilet secretions into the bottom of the device, making it hard to clean.**

Continuous rotation

The cylinder does not stop as it rotates from its initial position




05 CLEANING AND MAINTENANCE

For your cat's health, we recommend regularly cleaning, maintaining, or replacing the following components.



WARNING: Always power off or unplug the device before performing any cleaning or maintenance.

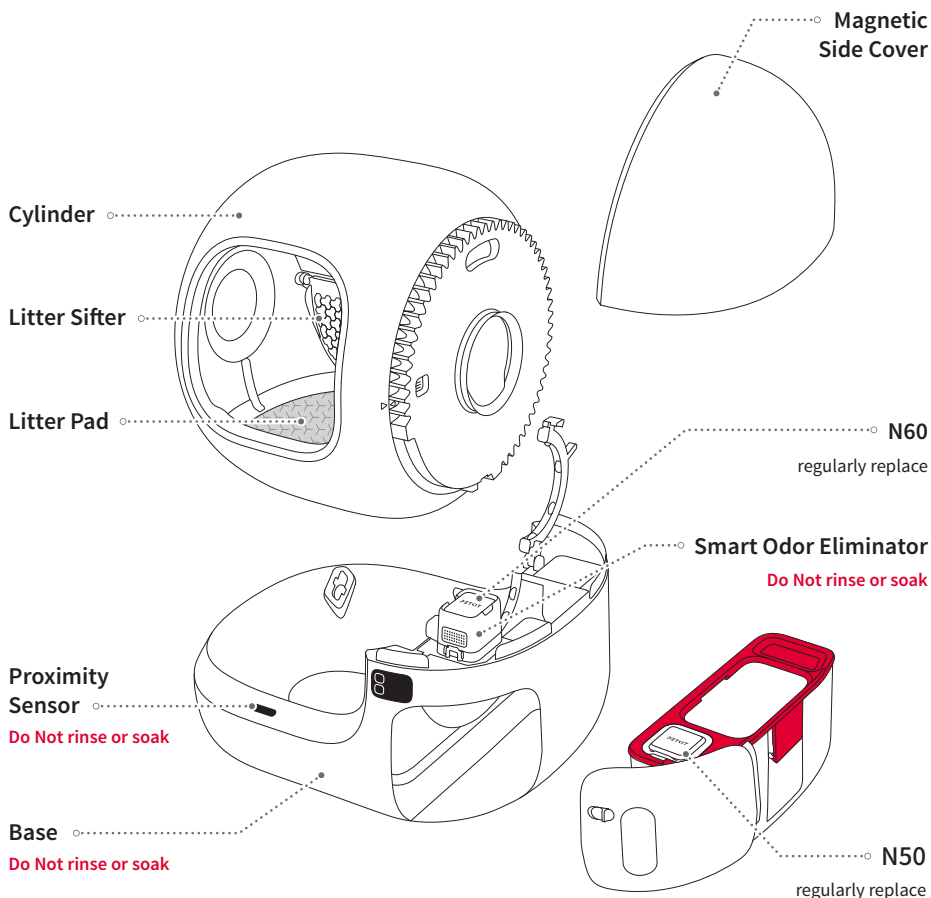


Component	When to Clean	How to Clean	When to Replace	How to Detach
Cylinder	When inner walls are dirty	Scrub with cleaning brush, dry completely	/	See 5.2
Litter Sifter	Based on degree of soiling. Clean promptly when cat has loose stool.	Scrub with cleaning brush, dry completely	When bent or damaged	See 5.2
Litter Pad	When soiled	Wipe gently with soft cloth or tissue dampened with clean water. Do NOT scrub.*	When heavily soiled with litter adhesion or torn with urine leakage	See 5.2
Base	After cleaning cylinder	Wipe with damp tissue	/	/
Proximity Sensor	When surface is dusty or dirty	Wipe with soft cloth	/	/
N50	/	/	Approx. every 30 days	Remove
N60	/	/	Approx. every 60 days	Remove


*** Avoid cleaning agents such as alcohol, disinfectants, bleach, or non-neutral detergents.**

5.1 Emptying the Litter Before Cleaning

❶ Hold the litter remover. Align the -shaped groove on the remover with the corresponding hole on the litter sifter until you hear a "click" sound. It is correctly seated.

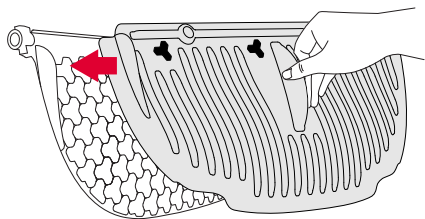

❷ On the App home screen, tap "Empty" and follow the on-screen instructions to empty the remaining litter from the cylinder. When finished, pinch the left-side tab to remove the litter remover.


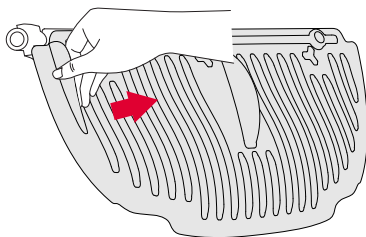


5.2 Removing the Cylinder, Litter Sifter, and Litter Pad


WARNING: Always power off or unplug the device before disassembly.

❶ Remove the magnetic side cover.


❷ Unlock the buckle.

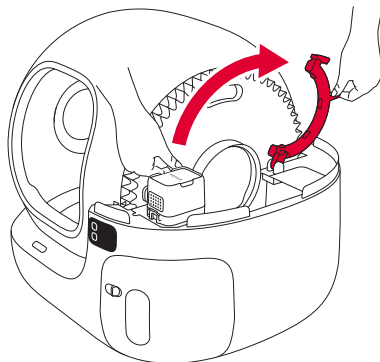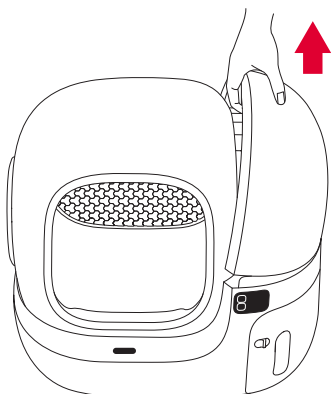


③ Remove the cylinder.

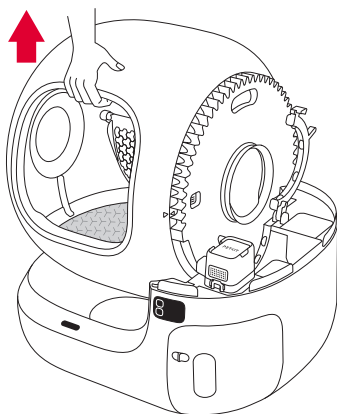


④ Place the cylinder against a wall for stability.

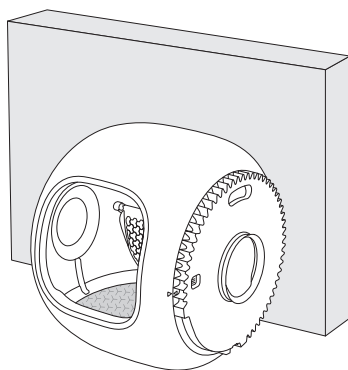


⑤ Press the right side of the litter sifter.

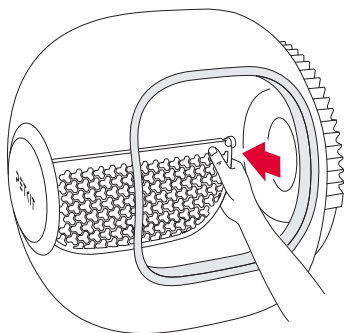

⑥ Press until it curves and remove it from the right buckle (Point A), then remove the left buckle (Point B). Take it out.

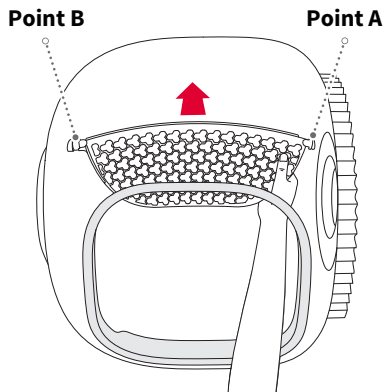

- ⑦ Pinch the handle on the litter pad and pull upward to remove it.

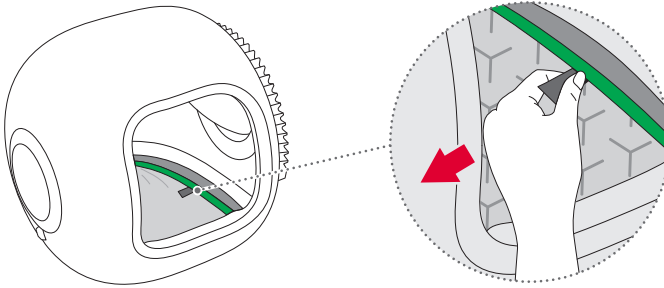



5.3 Cleaning the Main Unit and Components

⚠ WARNING: Do NOT rinse or submerge the litter box in water. Wipe only.

- ① Rinse the inside of the cylinder with water. Scrub all corners carefully with a cleaning brush and rinse clean.

- ② Gently scrub the litter sifter with a cleaning brush and rinse clean. Wipe the litter pad with a soft cloth dampened with clean water.


NOTE: Do NOT scrub hard, as this will damage the surface coating of the litter pad. Avoid using alcohol, disinfectants, bleach, or non-neutral cleaning agents.

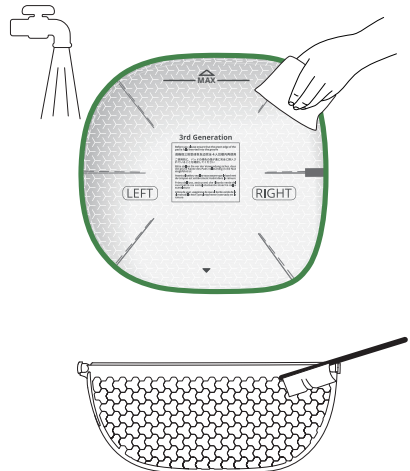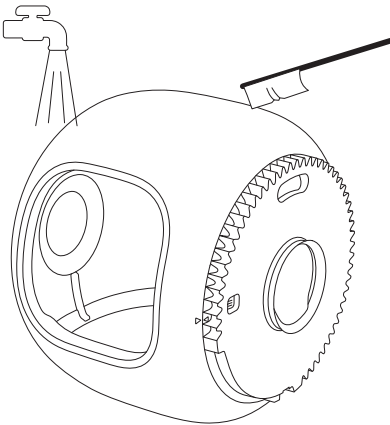

- ③ Wipe the surface and interior of the main unit body with a damp tissue.
Keep the proximity sensor clean.





Proximity Sensor

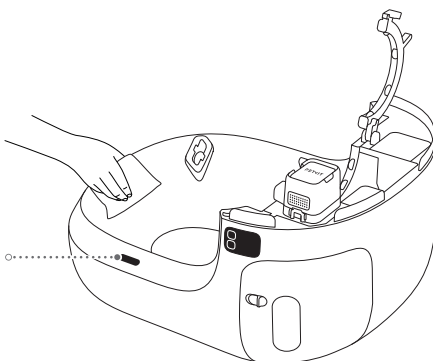

5.4 Reassembly After Cleaning


⚠ WARNING: Ensure all components are completely dry before reassembling.

- ① Hold the litter pad as shown. First insert the top edge into the groove (align the arrows), then gently lift slightly while inserting the bottom edge into the groove (align the arrows).

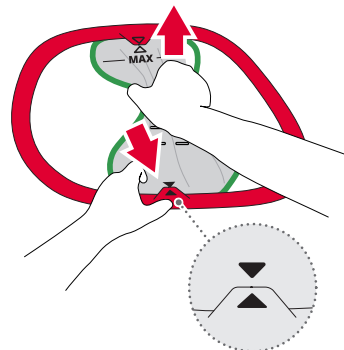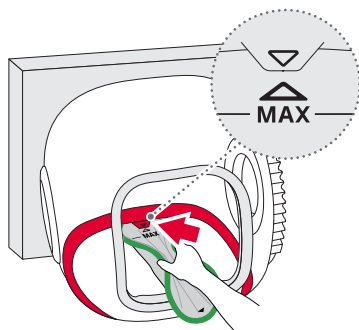


② Gently press and release — both sides of the pad will naturally snap into the grooves inside the cylinder.

NOTE: After installation, ensure the green border of the pad is completely hidden inside the groove, and that the arrows at both ends are pointing in the correct direction.

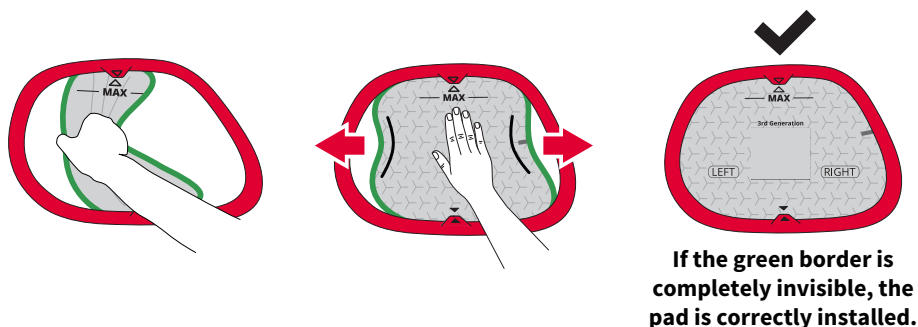


③ Place the litter sifter into the cylinder. First insert the right end into Point A.

④ Gently press the litter sifter inward until it curves slightly.

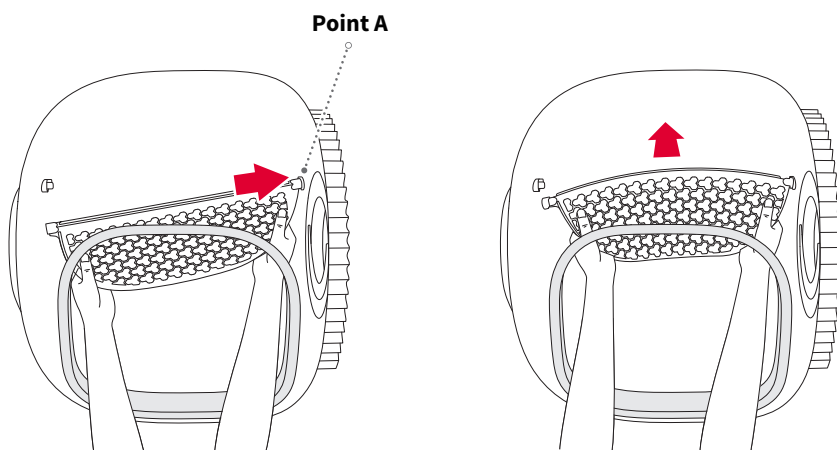


- 5** Insert the other end into Point B.


Point B

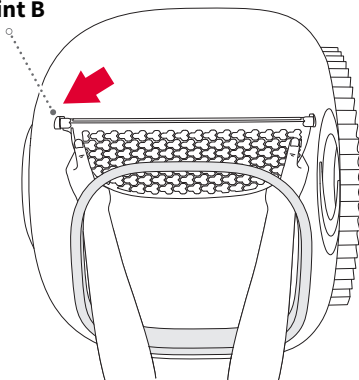


- 6** After installation, gently shake the litter sifter back and forth to confirm it is installed correctly.

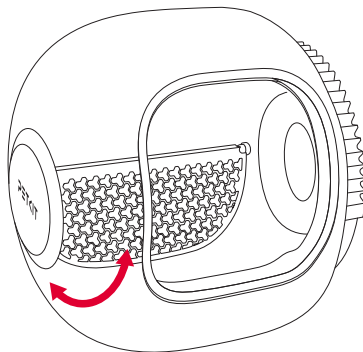

- 7** Place the cylinder back onto the base, secure the buckle, and ensure it is fully locked.

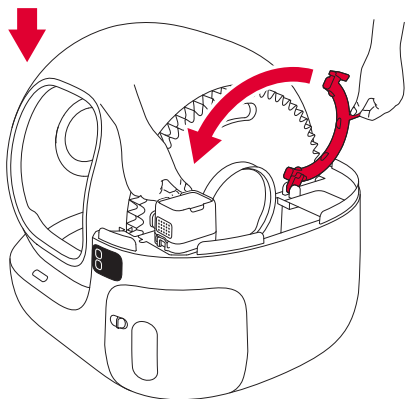

- 8** Reattach the magnetic side cover. Installation is complete.

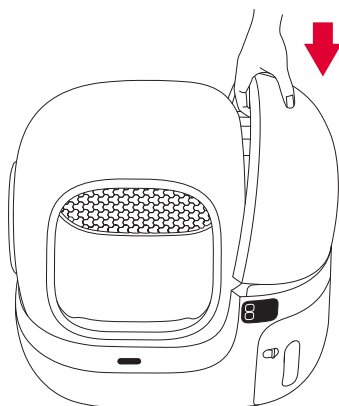

06 VIDEO GUIDE

6.1 Installation & Usage Video



Click to view

6.2 Maintenance & Cleaning Video



Click to view

07 BASIC SPECIFICATIONS

Name	PETKIT PUROBOT MAX 3 SELF-CLEANING CAT LITTER BOX
Model	P9906, P9911
Materials	PP, ABS, TPE, Silicone
Dimensions	21.25 × 24.21 × 21.96 in (540 × 615 × 558 mm)
Weight	Approx. 22 lb (10 kg)
Rated Input	12V === 2A
Connection	Wi-Fi, BLE
Suitable for	Cats over 6 months of age, weighing over 3.3 lb (1.5 kg)

* This manual applies to both models P9906 and P9911.

* Dimensions of the device are manually measured. A deviation of 0.39–1.18 in (1–3 cm) may occur.

08 TO OUR VALUED USERS

- Thank you for choosing the PETKIT PUROBOT MAX 3 SELF-CLEANING CAT LITTER BOX. PETKIT is dedicated to using technology to create a better life for you and your beloved pet.
- Please read this manual carefully before use. Once installed or in use, it is deemed that you have read and accepted the safety instructions below.
- PETKIT accepts no responsibility for any accidents or losses resulting from improper operation, and assumes no legal liability.
- PETKIT reserves the right to interpret and modify this statement.

09 SAFETY INSTRUCTIONS

*** Failure to comply with the following may result in abnormal product operation or other accidental damage.**

- Install and use the device strictly in accordance with this manual.
- Strictly prohibited for use by kittens under 6 months of age. Strictly prohibited for cats weighing less than 1.5 kg.
- Do not place the device in high-temperature or high-humidity environments.
- For indoor use only. Do not place in direct sunlight. Keep away from open flames.
- This product operates on safe low-voltage power, but pets chewing on the power cord can still cause electrical leakage risks. Secure and conceal the power cord during use to prevent pets from chewing on it. Stop any chewing behavior immediately if observed.
- Use only the original adapter. Using a non-original adapter may damage the device or create safety hazards.
- Place on a flat, hard surface and avoid touching the wall.
- Do not tilt the device, as this may create safety hazards.
- Do not rinse or submerge the main unit base in water.
- There are weight sensors on the base. Handle with care, lift gently.
- If the product will not be used for an extended period, unplug the power cord.
- Children need to use this device under the guidance of an authorized person
- Repairs should only be carried out by qualified personnel to avoid accidental injury.
- Do not place objects on top of the device or press down on the top, as this may interfere with normal operation.
- Before holidays or extended absences, always check that there is sufficient litter in the litter box and adequate space in the waste bin.
- If you experience any issues with the product, please contact customer service promptly.

Disposal

The European directive 2012 / 19 / CE on Waste Electrical and Electronic Equipment(WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this equipment must be installed and used in a separation distance of at least 20 cm from all persons.

IC warning

- English:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

- French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

